

WATERCO POOL HEAT PUMP WATERCO THERMOPOMPE CHAUFFE-PISCINE

AUSTRALIA

NSW - Sydney (HEAD OFFICE)
Tel: +61 2 9898 8686

VIC/ TAS - Melbourne
Tel: +61 3 9764 1211

WA - Perth
Tel: +61 8 9273 1900

QLD - Brisbane
Tel: +61 7 3299 9900

SA/ NT - Adelaide
Tel: +61 8 8244 6000

CANADA / NORTH-EAST USA

Waterco Canada Inc
Quebec, Canada
Tel: 1 888 796 6002

USA

Waterco USA Inc
Augusta, USA
Tel: +17067937291
+18002477291

NEW ZEALAND

Waterco (NZ) Limited
Auckland, New Zealand
Tel: +64 9 525 7570

CHINA

Waterco (C) Limited
Guangzhou, China
Tel: +8620 3222 2180

EUROPE

Waterco (Europe) Limited
Sittingbourne, Kent. UK
Tel: +44(0) 1795 521 733

MALAYSIA

Waterco (Far East) Sdn. Bhd.
Selangor, Malaysia
Tel: +60 3 6145 6000

Website / Internet : www.waterco.com

This web site address will enable you to select the appropriate country website.

Ce site web vous permettra de choisir le pays avec lequel vous devrez communiquer.

User and Care Guide Manual

Guide d'utilisation et d'entretien



⚠ WARNING

This equipment must be installed and serviced by a qualified technician. Improper installation can create electrical hazards which could result in property damage, serious injury or death. **Improper installation will void the warranty.**

⚠ DANGER

Cet équipement doit être installé et réparé par un technicien qualifié. Une mauvaise installation peut entraîner des risques électriques qui pourraient provoquer des dommages, des blessures graves ou la mort. **Une installation inadéquate annulera la garantie.**



Notice to Installer / Avis à l'installateur

This manual contains important information about the installation, operation and safe use of this product. Once the product has been installed, **this manual must be given to the owner/operator of this equipment.**

Ce manuel contient des informations importantes sur l'installation, l'exploitation et l'utilisation sécuritaire de ce produit. Une fois que le produit a été installé, **ce manuel doit être remis à l'acheteur et/ou utilisateur de cet équipement.**

WATERCO

Waterco Limited ABN 62 002 070 733

Member
WATER
QUALITY
ASSOCIATION



WATERCO
GRUPOA INC

L'eau, le liquide de la vie
water, the liquid of life

www.waterco.com

Table of Contents

A NOTE TO YOU _____	02	Protection Devices _____	16
GENERAL SAFETY INSTRUCTIONS _____	03	Adjustment of the Bypass Valves _____	16
Usage of Chemical Products _____	04	MAINTENANCE OF YOUR POOL HEAT PUMP _	17
INSTALLATION INSTRUCTIONS _____	05	Cabinet Cleaning _____	17
Location _____	05	Cleaning Evaporator _____	17
Water Piping _____	07	Winterizing _____	_____
Plumbing Diagram _____	07	TROUBLESHOOTING _____	18
Electrical _____	08	Nothing Is Working _____	18
Electrical Connection _____	08	Nothing Is Working but the Electronic	_____
Breaker Size _____	08	Control Displays Digits or a Code _____	19
Electrical Wire Size _____	08	Fan Doesn't Work _____	19
Bonding _____	09	(The Fan Blades Are Not Moving) _____	19
Bonding Diagram _____	09	Fan Blades Turn, but Compressor	_____
OPERATION OF YOUR POOL HEAT PUMP _	10	Is Not Functioning _____	20
Initial Heating _____	10	Compressor Starts and Stops _____	20
Pool Heat Pump Running Time _____	10	There Is Water Around the Pool Heat Pump _	20
Pool Solar Blanket _____	11	Pool Heat Pump Has Ice Formed	_____
Defrost Cycle _____	11	On the Evaporator Coil _____	21
Electronic Control with Diagnostics	_____	Pool Heat Pump Is Not Heating _____	22
And Reversible (XLR) Electronic	_____	Analysis Chart _____	_____
Control with Diagnostics _____	11	Circuit Breaker Trips _____	24
To Start the Pool Heat Pump _____	12	Pool Heat Pump Is Noisy _____	24
To Stop the Pool Heat Pump _____	12	The Temperature Shown on Pool Heat Pump	_____
To Check and Adjust Temperature Settings	12	Is Not the Same than the Pool Thermometer _	24
Specific Functioning of your Reversible	_____	Service Analyser Codes _____	25
(XLR) Electronic Control with Diagnostics _	13	WARRANTY _____	29
Temperature Calibration _____	14		
Operation of your Pool Heat Pump with a	_____		
Timer on your pool pump _____	15		
Installation with a remote control _____	15		

A NOTE TO YOU

Congratulations!

You have made an excellent choice! The Waterco pool heat pump will give you unique comfort at low-price.

Using the latest technology in heat capture, the Waterco pool heat pump converts the energy released by the sun and transfers it efficiently to your swimming pool.

During certain periods, it may be necessary to operate your pool heat pump continuously. However, this should not be of concern as your Waterco pool heat pump can heat up your pool 80% more economically than the fossil fuel heating or heaters with electric elements. Waterco pool heat pumps are designed specifically to heat up your swimming pool economically.

To appreciate the benefits that the product will bring you, make sure to operate the unit when the atmospheric conditions specified in this document are present in addition of using a solar blanket to minimize heat loss. Pools not covered with a solar blanket lose 2 to 3 times more heat, regardless of types of heating!

Record your model's information.

Keep this manual and your original proof of purchase receipt for warranty and future references.

On the base of your pool heat pump is a name plate which contains information such as model number, serial number and electrical information.

Please write these down below and have them handy in case of a service call request.

Number	_____
Serial Number	_____
Purchase Date	_____
Dealer Name	_____
Dealer Address	_____
Dealer Phone	_____

To find detailed product information, the location of the nearest dealer or to register your pool heat pump, please visit our website www.waterco.com and select your location.

GENERAL SAFETY INSTRUCTIONS

We have provided important safety messages in this manual and on your pool heat pump. Always read and obey all safety messages.

WARNING

This is safety alert symbol.
This symbol alerts you to hazards that can kill or hurt you and others.

VITAL

This is a very important label.
This symbol alerts you of instructions that **MUST** be followed properly in order to ensure that your warranty will not be voided.

IMPORTANT

These are instructions that must be respected in order to protect the user's health and to ensure that your warranty will not be voided.

GENERAL SAFETY INSTRUCTIONS

WARNING

All electrical connections must be carried out by a qualified electrician, according to the local electrical codes. Always cut off the unit's main power whenever the access panel is open or removed. It is strongly recommended that the pool heat pump is installed outdoors (unless approved by the manufacturer), while respecting the minimal clearances needed for proper operation and heating. Please refer to the section "Location" on the following page.

IMPORTANT

Proper pool chemistry is vital to the longevity of your pool heat pump. Pay a particular attention to the total alkalinity and total dissolved solids. It is highly recommended that you have your pool chemistry checked often by an outside independent pool store. Your pool water chemistry must be maintained at all times, as shown in the table below, to prevent damage to your pool heat pump.

Usage of Chemical Products

Never add liquid chlorine, granular chlorine or slow dissolving tablets/pucks into the skimmer basket. This high concentration of chemicals should be avoided.

Water quality standards that must be strictly adhered to*:

DESCRIPTION	NORMAL RANGE*	VERIFY
PH Level	7.4 to 7.8	1 per week
Chlorine Concentration	1.0 to 4.0 PPM	1 per 2-3 days
Total Alkalinity	100 to 120 PPM	1 per 2-3 weeks
Total Dissolved Solids	Below 1800 PPM <i>Reg. Pool</i>	1 per month
	Below 3500 PPM <i>Salt. Pool</i>	1 per month
Calcium Hardness	200 to 300 PPM	1 per month

* Warranty can be voided if not maintained within these ranges.

VITAL

MAKE SURE THE INSTALLATION WAS CARRIED OUT ACCORDING TO THE INSTRUCTIONS OF THIS MANUAL. SEE "INSTALLATION" SECTION.


MAKE SURE YOUR POOL HEAT PUMP WAS PROPERLY GROUNDED AND BONDED. SEE "BONDING" AND "BONDING DIAGRAM" SECTIONS.

BEFORE ASKING FOR ASSISTANCE OR SERVICE, PLEASE READ CAREFULLY THE SECTIONS ON "TROUBLESHOOTING" AND "WARRANTY".

GENERAL SAFETY INSTRUCTIONS


DO NOT DEPRIVE YOUR POOL HEAT PUMP OF WATER FLOW FOR MORE THAN 24 HOURS WITHOUT DRAINING IT. Make sure you leave the bypass valves as shown in Figure 1.

At the end of each season, when the pool heat pump is no longer in use and proper pool water chemistry is not maintained; it should be disconnected from the water line and drained to prevent any possible corrosion or damage to the pool heat pump. Refer to Figure 1 below or winterizing procedure in the section "Maintenance of your Pool Heat Pump".

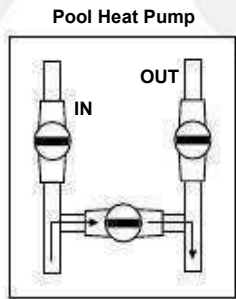

When your valves positions are as shown on Figure 1, the water is bypassing the pool heat pump.

Figure 1

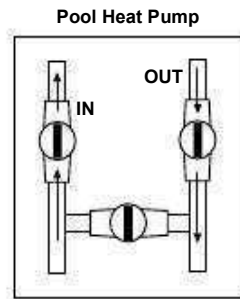

When your valves positions are as shown on Figure 2, the water is going through the pool heat pump.

Figure 2

The valves shown above may be different from the ones installed on your system. Please ensure you understand how your bypass valve operates.

INSTALLATION INSTRUCTIONS

Location

In order to gain maximum efficiency, please follow the instructions when deciding where to position your pool heat pump. It is also important to allow clearances for future service and maintenance procedures.

The unit is designed for outdoor installation and should not be installed in a totally enclosed area such as a shed, garage, etc., unless ventilation is provided to ensure adequate air exchange for proper operation. Re-circulation of cold discharged air back into the evaporator coil will greatly reduce the unit's heating capacity and efficiency. Inside installation must be validated and approved by an authorized service center otherwise warranty could be avoid.

INSTALLATION INSTRUCTIONS

Location

The unit should be located as close as practically possible to the existing pool pump and filter to minimize water piping. The use of 90 degree bends and short radius elbows in the water piping should be kept to a minimum.

Mount the unit on a sturdy base, preferably a concrete slab or blocks. The base should be completely isolated from the building foundation or wall to prevent the possibility of sound or vibration transmission into the building. The size of the base should not be less than the base of the unit.

An improper installation will lead to poor drainage (an accumulation of water will cause a built up of ice on the evaporator coil).

IMPORTANT THE POOL HEAT PUMP MUST BE DISCONNECTED BEFORE OPENING THE ACCESS PANEL.

Your pool heat pump will accumulate condensed water (approx. 1 to 1.5 gallon or 4 to 6 litres per hour), therefore causing water to drain out of the unit base. In order to avoid water accumulation, you may use decorative rocks around the concrete slab or a basin under the unit. Please note this is a normal characteristic of a pool heat pump and not a service or warranty issue.

Air is pulled through the evaporator coil and discharged through the top or front grill. Clearances should be allowed in front and around the unit for unrestricted air discharge and service access. See Figure 1 and Figure 2.

Re-circulation of cold discharged air back into the evaporator coil, will greatly reduce the unit's heating capacity and efficiency.

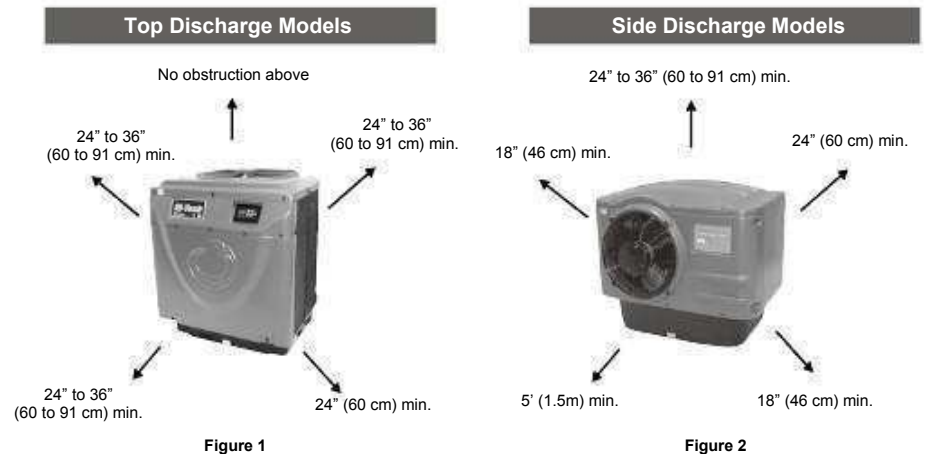


Figure 1

Figure 2

INSTALLATION INSTRUCTIONS


Water Piping

The following piping sequence must be followed without exception: 1-pool pump 2-filter 3-pool heat pump 4-chlorinator (when installed). Rigid PVC piping is recommended, all joints should be glued with PVC glue. If rigid PVC is not available, you can use soft or flexible piping with stainless steel clamps. When the piping installation is complete, operate the pool pump and check the system for leaks. Then check the filter pressure gauge to see that excessive pump head pressure is not indicated. NOTE: Units are designed to operate with a minimum water circulation of 132 LPM/35 GPM.

NOTE: A bypass kit is strongly recommended and should be installed for adjustment of water flow and ease of service.

Plumbing Diagram

VITAL

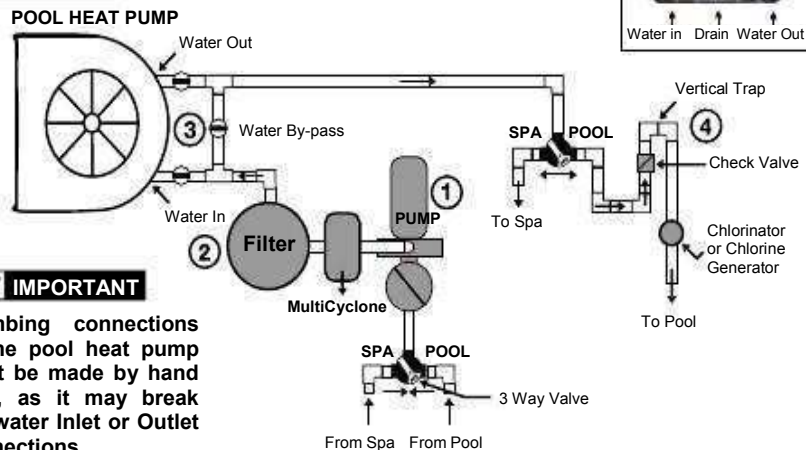

IMPORTANT

Plumbing connections to the pool heat pump must be made by hand only, as it may break the water Inlet or Outlet connections.

1. Either a 1/3 pound check valve or a loop **MUST** be installed between the pool heat pump and any automatic chlorinator to prevent highly chlorine concentrated water from flowing back to the pool heat pump when the pool pump is not running.
2. Units that are located below the water level of the swimming pool may require the pressure switch to be adjusted. This can be checked by the following method:
 - Switch **ON** the water pump and the pool heat pump
 - While the pool heat pump is running, switch **OFF** the water pump.

If the pool heat pump shuts down automatically no further action is required.

If the pool heat pump continues to run, you will need to have a qualified technician adjust the water pressure switch (not under warranty). For further information, please contact Waterco.

INSTALLATION INSTRUCTIONS

IMPORTANT

Electrical

To ensure your safety and ensure the adequate functioning of your pool heat pump, **all electrical work should be performed by a fully qualified and licensed electrician in accordance with local electrical codes.**

An adequate circuit breaker and copper wiring must be used. This information is available on the name plate of the pool heat pump. It may be necessary to install a ground circuit breaker.

WARNING

Electrical Connection

Standard 60 Hz power supply : 208/240 v - 60Hz-1 phase

Standard 50 Hz power supply : 208/240 v - 50Hz-1 phase

3 phase power supply : 200/230 v - 50/60 Hz - 3 phase

: 380/420 v - 50/60 Hz - 3 phase

Breaker Size

Please consult the name plate on the base or the side of your pool heat pump for running amperage and required breaker size.

Electrical Wire Size

Please consult a qualified and licensed electrician.

WARNING

The power cable ground must be connected to the electrical panel and to the ground lug of the pool heat pump. An improper installation may be a potential cause of fire, electrical shock or injury.

INSTALLATION INSTRUCTIONS

Bonding

⚠ VITAL

Because all metals have different electrical potentials, **ALL metal and electrical components of the pool system MUST be bonded together.** This includes the metal framework of the pool, the light, the pump, the filter (if metal), the pool heat pump, any automatic chlorine generator and any other metal or electrical equipment bonded to your pool.


On some older pools, this substructure bond wire may not exist. In these cases, a 3 - 4 foot solid copper rod must be driven into the ground near equipment; all electric and metal components must be bonded to each other and to the copper rod. Warranty will be voided if system is not properly bonded.

CAUTION: It is recommended when using automatic chlorinators, to ensure that they are properly installed and bonded. Some of these systems may leak stray voltage and currents into the water causing severe electrolysis. This dramatically shortens the life of the pool heat pump and will void the warranty.

NOTE: Bonding to pool pump is not required for above ground pool pumps but all other equipment must be bonded.

Bonding Diagram

⚠ VITAL

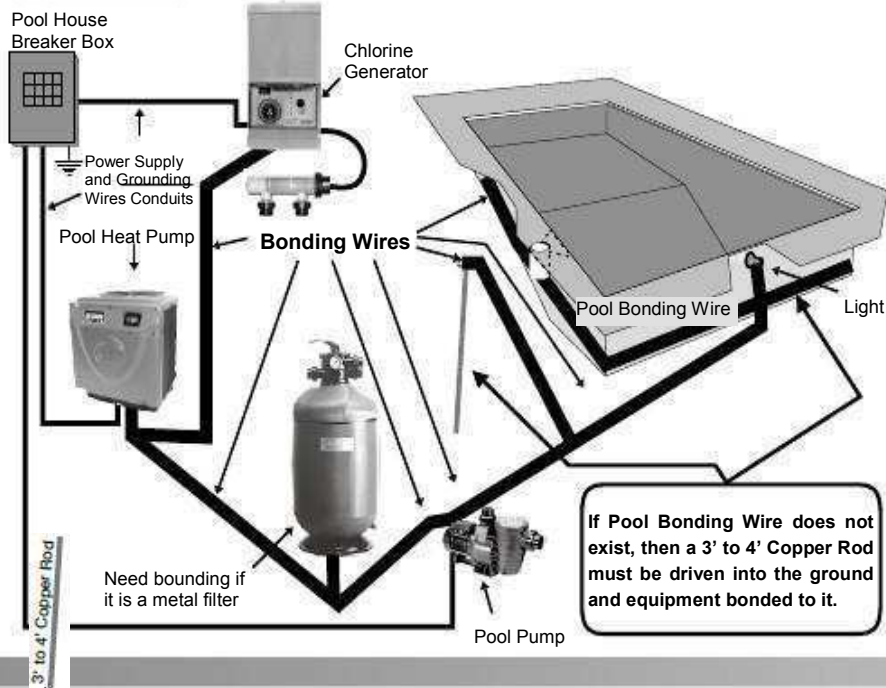

OPERATION OF YOUR POOL HEAT PUMP

Initial Heating

Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and are not covered by the warranty.

If temperatures are below the minimum temperatures listed, the pool heat pump should not be operated and must be switched off.

For Ultra and Reversible (XLR) units, they will automatically stop without human intervention.

Model	Atmospheric conditions must be above	Pool water temperature must be above
Ultra	32 °F (0 °C)	50 °F (10 °C)
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)
All others	52 °F (11 °C)	65 °F (18 °C)

The speed of heating is dependent of five basic factors:

1. Size of the pool.
2. How many degrees the water is to be heated.
3. Ambient air temperature - the warmer the air, the less time required to heat.
4. Use of a solar blanket.
5. The size of the pool heat pump.

To achieve initial heating, your pool heat pump and the pool pump may work up to 24 hours per day until desired temperature is achieved. The initial heating time may vary depending of the above five factors. After initial heating, operating time may be reduced to match daily heat loss.

Pool Heat Pump Running Time

Most units should be sized to operate during the pool filtering cycle time of 8-12 hours daily, providing an even, steady flow of warm water. On warmer days, the pool heat pump will run less because the heat loss will be less. Pool heat pumps are able to operate 24 hours per day when necessary.

OPERATION OF YOUR POOL HEAT PUMP

Pool Solar Blanket

A pool solar blanket should be used whenever possible. Blankets minimize heat loss and conserve heat in your pool. Un-blanketed pool loses 2-3 times more heat than a blanketed pool. **STRONGLY RECOMMENDED AT THE BEGINNING AND END OF SEASON**


Defrost Cycle

When any of the following conditions occur, the electronic control of your unit will activate a defrost mode until all frost from the evaporator has melted. Condensation of water on the evaporator coil tends to frost up quicker when the following occur.

1. When atmospheric conditions are as stated on previous page;
2. When the evaporator is dirty;
3. When installation clearances are not respected.

Defrost is activated for a laps of time between 3 to 20 minutes.

Electronic Control with Diagnostics and Reversible (XLR) Electronic Control with Diagnostics

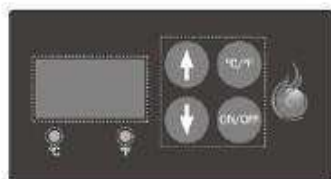

**Electronic Control
with Diagnostics**



**Reversible (XLR) Electronic
Control with Diagnostics**

OPERATION OF YOUR POOL HEAT PUMP

To Start the Pool Heat Pump

Press the button **ON/OFF** on the electronic control to start the pool heat pump. The temperature display shows the pool water temperature flowing in your pool heat pump and the fan motor starts (fan blades turn) but the compressor does not start.

The temperature display flashes until the compressor starts and when the timer will complete its cycle of 5 minutes. After 5 minutes, the compressor starts and the temperature on the display stops flashing.

You can now program the desired temperature for the pool water.

To Stop the Pool Heat Pump

The pool heat pump can be stopped by pressing the **ON/OFF** button once.

To Check and Adjust Temperature Settings

To program the desired water temperature, press **BOTH** the **UP** and **DOWN** arrow keys at the same time until the temperature displayed changes degree, then release them.

Press the **UP** or **DOWN** arrow to program the desired temperature. The temperature setting will automatically flash and will be saved. The display temperature will be reverting back to the pool water temperature when all keys remain untouched for 5 seconds.


To change the temperature display from Fahrenheit (°F) to Celsius (°C), press the button **°C/°F**. The led below the °F or °C will be lit to indicate the current selection.

Note: The pool heat pump will stop working when the programmed temperature is reached.

Functioning of your Electronic Control with Diagnostics and Reversible (XLR) Electronic Control with Diagnostics



Electronic Control with Diagnostics

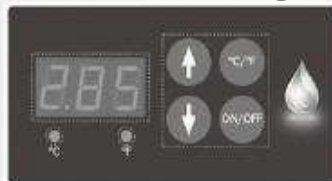

Reversible (XLR) Electronic Control with Diagnostics

In addition of controlling the temperature of the water, this electronic control informs you on the operation of your pool heat pump or any faults that may arise by displaying codes on the temperature display.

When the unit is in defrost mode, the code **DEF** is displayed on the temperature display. This under normal conditions is not considered to be a fault.

Specific Functioning of your Reversible Electronic Control with Diagnostics (XLR)

During the defrost cycle, the fan motor stops working and the hot gas is injected into the evaporator to melt the frost. However, when the unit makes 4 consecutive cycles (heating and defrost) within 1 hour, the unit goes into protection mode to avoid inefficient use of electricity. These frequent defrost cycles mean that the conditions of ambient temperature and humidity do not allow to heat your pool water. The **DEF** code and the water temperature will be displayed alternately on the electronic control. Refer to the section "Service Analyser Codes" to validate what you should do.

Codes

If a code appears on the electronic control refer to the section "Service Analyser codes".

OPERATION OF YOUR POOL HEAT PUMP

Temperature Calibration

It is possible to have a temperature variation between the water in the swimming pool and the reading of the pool heat pump temperature probe (sensor). Example: the water in the pool is 26 °C (80 °F) and the pool heat pump electronic control displays 24 °C (76 °F).

To calibrate this variation, perform the following procedure:

1. With the use of an accurate thermometer, read the pool water temperature (e.g.: 26 °C).
2. Read the temperature displayed on the pool heat pump electronic control (e.g.: 24 °C).
3. To determine the differential subtract the pool water temperature from the pool heat pump displayed temperature, $26 - 24 = 2$ °C. Therefore we must compensate for the 2 °C variation.
4. Press **BOTH** the **UP** and **DOWN** arrow keys until the programmed temperature is displayed (the temperature you have previously set) then release both buttons.
5. Press the **ON/OFF** button and release.
6. Using the **UP** or **DOWN** arrows, enter the calibration value, (2 °C). In this case, by pressing the **UP** arrow twice.
7. After 5 seconds, when all the buttons have remained untouched, the display temperature will show the pool water temperature as per your thermometer. If this is the case, the calibration process was successful.

IMPORTANT

Functioning of Timer Controlling your Pool Pump

Note: This option could be install with all our product by following our recommendations.

When a timer is use on a pool pump the unit will stop on the flow switch protection and the digital displays will show nFL until the timer restart the pool pump.

IMPORTANT: If you using this option take note than the unit will be heat the pool only when the timer allowed the pool pump to work.

Example:

If you program a cycle of 8 hours of your pool pump (twice cycle of 4 hours) the unit will be allowed to heat the water only in this period. If you have program your electronic control at 82 °F (28 °C) and the temperature of the pool is 70 °F (21 °C) the time to reach the temperature require will be dramatically extended. That's why we strongly suggest at the beginning of the season to not use the timer until the desire temperature will be reach before using this timer.

IMPORTANT : If your unit does not stop on the nFL code but in HP code your flow switch can be adjust to result this situation. This adjustment was not covered by the warranty.

Installation of a remote control

Note: This system could be install with all our product by following our recommendations.

When a remote control is use on your pool heat pump the unit stop completely, when the unit was stopped by the remote control (blank electronic control) until the remoter control will restart the system.

IMPORTANT : If you would like to use this system it must be install by an authorize service center otherwise warranty could be avoid.

OPERATION OF YOUR POOL HEAT PUMP

Protection Devices

The integrity and performance of your pool heat pump and its components are protected by internal safety controls. In normal use, your Waterco unit should never reach the thermal protection level. However, if it should happen, you should identify the stated code on the temperature display and refer to the section "Service Analyser Codes".


Adjustment of the Bypass Valves

The adjustment may vary according to pool pump size and ambient temperatures.

ATTENTION: IT IS VERY IMPORTANT THAT THE BYPASS VALVES ARE SET AS DESCRIBED BELOW FOR THE CORRECT FUNCTION OF YOUR POOL HEAT PUMP.

VALVE POSITION

POOL HEAT PUMP

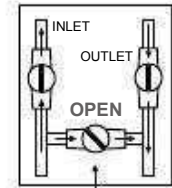


When the pool water temperature is between 65 °F (18 °C) and 70 °F (21 °C), please adjust the bypass valve as shown.

Approx. 60% of the water is circulating in the unit.

VALVE POSITION

POOL HEAT PUMP

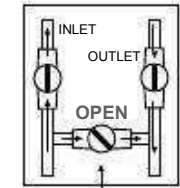


When the pool water temperature is between 70 °F (21 °C) and 78 °F (26 °C), please adjust the bypass valve as shown.

Approx. 80% of the water is circulating in the unit.

VALVE POSITION

POOL HEAT PUMP

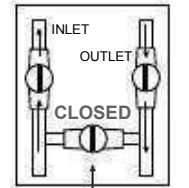

When the pool water temperature is above 79 °F (26 °C), please close the bypass valve as shown.

100% of the water is circulating in the unit.

MAINTENANCE OF YOUR POOL HEAT PUMP

Waterco pool heat pumps have been specifically engineered to give you years of satisfaction and enjoyment in the pool.

Cabinet Cleaning

To clean the plastic surfaces, use mild soapy water and a soft clean cloth. Never use solvents or abrasives.

Cleaning Evaporator

It is vital that the evaporator is kept clean and un-obstructed in order for your pool heat pump to have better efficiency and avoid problems which may void your warranty. The dirt collected in the evaporator can be removed with a gentle water spray and the use of a soft brush. Be careful not to damage the aluminum fins.

Winterizing

A VITAL

If the pool heat pump is stored in a place where the temperature drops below the freezing point of 0 °C (32 °F); it is **mandatory that the water accumulated in the pool heat pump be drained completely before freezing weather prevails. Improper winterizing may damage the pool heat pump and will void the warranty.**

1. Turn the pool heat pump **OFF**;
2. Turn the pool heat pump breaker **OFF**;
3. The water piping **MUST** be disconnected to drain the pool heat pump's heat exchanger in preparation for winter;
4. Once the piping is disconnected, the pool heat pump's heat exchanger **MUST** be emptied; the use of a water vacuum cleaner is strongly recommended or if you do not have this tool, you can tilt the unit (75°) until all the water is out;
5. It is recommended that the pool heat pump's heat exchanger is rinsed out with a gentle water spray at the inlet and outlet water connections of the pool heat pump and then drained again;
6. With the help of 2 pool return plugs, block the water inlet and outlet connections to prevent access by vermin;
7. Clean the drainage holes located at the bottom of the base of the unit;
8. Unit may be cover for the winter;
9. It is also possible to fill the heat exchanger with pool anti-freeze, but ensure that the anti-freeze contains an elevated pH to prevent corrosion. This is optional and requires appropriate hardware.

TROUBLESHOOTING

IMPORTANT

Please make sure you carefully read the troubleshooting section in order to avoid unnecessary service call fees.

Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and it is not covered by the warranty.

If temperatures are below the minimum temperatures listed, the pool heat pump should not be operated and must be switched off.

For Ultra and Reversible (XLR) units, they will automatically stop without human intervention.

Model	Atmospheric conditions must be above	Pool water temperature must be above
Ultra	32 °F (0 °C)	50 °F (10 °C)
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)
All others	52 °F (11 °C)	65 °F (18 °C)

If you made the purchase of equipment not included with the Waterco pool heat pump, make sure that the equipment was properly installed. If the problem is the installation of the other equipment; Waterco warranty will not apply and you must pay the service call fees.

Nothing Is Working

1. Make sure the circuit breaker has not tripped and/or that the fuses are not burned out;
2. For three phase models, this situation could occur when the phases are not in the appropriate order. The green led light on the front panel will not light up.

Take note: For the situations mentioned above, only a qualified electrician can verify the proper functioning. If the circuit breaker is defective and/or if the phases are not in the appropriate order; it will not be covered by the warranty. This situation could also occur when the electrical voltage, as stated on the pool heat pump name plate, is not respected. This situation is not covered by the warranty.

TROUBLESHOOTING

Nothing Is Working but the Electronic Control Displays Digits or a Code

1. Identify the analyser code that the electronic control displays and refer to the section "Service Analyser Codes";
2. If the electronic control displays digits, make sure that the electronic control is programmed correctly, refer to the section "Operation of your Pool Heat Pump" and reprogram if necessary.

****Note that this situation could occur when the electrical voltage, as stated on the pool heat pump name plate, is not respected. This situation is not covered by the manufacturer warranty.**

If you made the purchase of an automation system (or another equipment not included with the Waterco pool heat pump), make sure that the equipment was properly installed. If the problem is the installation of the other equipment, Waterco warranty will not apply and you will pay the service call fees.

Fan Doesn't Work (the Fan Blades Are Not Moving)

1. **IMPORTANT: For safety**, switch **OFF** the circuit-breaker;
2. Try to rotate the fan blades of the fan with a rod to see if the motor is jammed or seized;
3. If the fan blades do not turn freely, leave the unit switched **OFF** and call for service;
4. If the fan blades turn freely, switch **ON** the circuit breaker and the pool heat pump again.

**** Note that your fan motor may have an electrical fault if the blades turn freely when the unit is switched **OFF** and does not start when the unit is switched **ON**.**

TROUBLESHOOTING

Fan Blades Turn, but Compressor Is Not Functioning

The pool heat pump has a built in delay timer which prevents the compressor from starting immediately. The delay can be 3 to 5 minutes in duration after the fan blades have turned. Furthermore, if the unit is in defrost mode, the compressor will not start for 3 to 20 minutes.

1. Check that air being discharged from the fan blades is colder than the ambient air. If the air being discharged by the fan blades is colder, it means that the compressor is functioning correctly.
2. Turn **OFF** the pool heat pump, then immediately turn it back **ON**;
3. As soon as the fan blades start turning, wait a minimum of 3-5 minutes. The compressor should start up after this time and you will be able to identify a different sound made by the compressor when it starts;
4. If the compressor is functioning, but shuts off immediately, consult the section "Compressor Starts and Stops".

Compressor Starts and Stops

1. Check that the unit has been installed correctly. Refer to section "Installation Procedures".
2. Check that the water inlet and outlet of the unit have been connected correctly.

There Is Water Around the Pool Heat Pump

It is a normal occurrence for water condensation to be seen running from the unit base. There will be on average 1 to 1.5 gallons (4 to 6 litres) of condensed water per hour being discharged from the unit base. In order to avoid water accumulation, you may use decorative rocks around the concrete slab or a basin under the unit. Be sure that clearances around the unit are respected.

To test the unit and confirm you have no pool water leaking from the unit, perform the following test which is best performed early in the morning and continued for the whole day:

1. Turn **OFF** the pool heat pump from the circuit breaker and the pool pump.
2. Open the bypass valve.
3. Close the **IN** and **OUT** water valves on the unit.
4. Restart the pool pump. The pool heat pump **MUST** remain **OFF**.
5. When all of the water around the base of the pool heat pump has dried, open the water **IN** and water **OUT** valves on the pool heat pump.
6. Close the bypass valve to allow full water flow through the pool heat pump.

If water is now seen running from the outside of the pool heat pump or inside the pool heat pump after a short period of time, you should call for service. If no water is seen after a short period of time, it would be assumed the water was condensation which is normal.

TROUBLESHOOTING

Pool Heat Pump Has Ice Formed on the Evaporator Coil

Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and are not covered by the warranty.

If temperatures are below the minimum temperatures the pool heat pump should not be operated and must be switched off.

For Ultra and Reversible (XLR) units, they will automatically stop without human intervention.

Model	Atmospheric conditions must be above	Pool water temperature must be above
Ultra	32 °F (0 °C)	50 °F (10 °C)
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)
All others	52 °F (11 °C)	65 °F (18 °C)

- IMPORTANT: For safety**, switch **OFF** the circuit-breaker.
- Allow the ice to melt and then inspect the evaporator to ensure it is free of debris and leaves.
- If the evaporator is dusty or dirty, clean it with a light spray of water and allow it to dry (do not use high pressure, it may damage the evaporator fins).
- When the unit is dry, you may switch it back **ON** from the circuit breaker.
- Ensure that the clearances around the unit are respected.
- When the unit has been switched **ON**, ensure the fan motor is working (fan blades will be turning) while the compressor is operating.
- If the fan blades do not turn and the compressor is functioning; notify customer service.

If the pool heat pump requires service, the owner of the pool heat pump will need to ensure the unit has been switched **OFF to allow any ice to melt prior to any technician attending.

TROUBLESHOOTING

Pool Heat Pump Is Not Heating

Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and are not covered by the warranty.

If temperatures are below the minimum temperatures the pool heat pump should not be operated and must be switched off.

For Ultra and Reversible (XLR) units, they will automatically stop without human intervention.

Model	Atmospheric conditions must be above	Pool water temperature must be above
Ultra	32 °F (0 °C)	50 °F (10 °C)
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)
All others	52 °F (11 °C)	65 °F (18 °C)

IMPORTANT

Improper installation may cause this situation and will need to be corrected by the owner.

- Make sure the bypass valves are in the correct positions to ensure sufficient water flow. Insufficient water flow will cause the compressor to shut off early.
- If you have installed a timer or the pool heat pump is equipped with an integrated timer, be sure it is programmed to allow the pool pump to work for sufficient time in order to reach the programmed temperature.
- Ensure the evaporator is cleaned regularly with a light spray of water and allow it to dry before re-starting the pool heat pump to avoid premature ice build up on the evaporator.
- Waterco recommends the use of a solar cover to retain heat of pool water. Pools without covers lose 2 to 3 times more heat than pools with solar covers.
- Make sure the electronic control of your pool heat pump has been programmed correctly; during this test the pool heat pump and pool pump must be working continuously (e.g.; the desired water temperature must be set correctly).
- If the unit continually fails to reach the desired water temperature, we suggest completing the following analysis chart and forwarding it to Waterco in order to avoid unnecessary service fees.

TROUBLESHOOTING

Analysis Chart

During this test, the pool heat pump as well as the pool pump **must be working continuously**. Make sure that the information taken is adequate since, if no manufacturing problem is detected by the service company mandated by Waterco during the service call, the owner will have to pay for the service call fees since it will not be covered by the warranty.

Customer's Name			
Serial Number		Desired Temperature	
Pool Dimension		Use of a Solar Cover (Yes or No)	

Important: Please record all information below in the morning, before 12h00, for three consecutive days	Day 1	Day 2	Day 3
Outside air temperature			
Weather conditions outside (e.g.: cloudy, sunny or rainy)			
Pool water temperature. **Use a pool thermometer			
Pool water temperature shown on the electronic control of the pool heat pump			

Important: Please record all information below, 8 hours later than those taken in the morning	Day 1	Day 2	Day 3
Outside air temperature			
Weather conditions outside (e.g.: cloudy, sunny or rainy)			
Pool water temperature. **Use a pool thermometer			
Pool water temperature shown on the electronic control of the pool heat pump			

TROUBLESHOOTING

Circuit Breaker Trips

If you have purchased a remote control (or other equipment), make sure this equipment was properly installed. If the problem originates from the installation of this equipment, the warranty will not apply and you will have to pay the cost of the service call.

1. The amperage of the circuit breaker **AND** the electrical wiring must be as the instruction on the pool heat pump name plate; otherwise notify your installer or electrician to correct this problem, as this is not covered by the warranty.
2. If the circuit breaker and electrical wiring are as stated, make sure the drains located on each side of the base of the pool heat pump are not obstructed.

The Pool Heat Pump Is Noisy

1. Check that the pool heat pump is leveled and on a solid base to prevent any vibrations issues.
2. Ensure the noise is coming from the pool heat pump and not from other equipment which will not be covered by the warranty (e.g.: noise coming from the bypass valve, pool pump, etc);
3. An improper installation may cause this situation; it will need to be corrected by the owner. This situation is not covered by the warranty.

The Temperature Shown on the Pool Heat Pump Is Not the Same than the Pool Thermometer

It is possible to have a temperature variation between the temperature shown on the electronic control temperature display of the pool heat pump and a pool thermometer which may be read from different locations. Please refer to the section "Temperature Calibration", in order to adequately recalibrate temperature if required.

Service Analyser Codes (All Models)

Most problems will be detected by the electronic control and a code will appear on the temperature display. Make sure you follow the **Action / Remedy** instructions where possible, before making a service call request and avoid paying unnecessary service call fees. If the code remains on the display after you have followed the **Action / Remedy** instructions, please contact Waterco.

Code	Problem - Action / Remedy
oC2, Sc2	<p>Problem: The intake temperature probe has a loose connection or is faulty. The probe will need to be checked and replaced, if required.</p> <p>Action / Remedy: Contact customer service.</p>
nFL	<p>Problem: No water flow, not sufficient water flow through the pool heat pump or the water pressure switch needs to be adjusted (not covered by the warranty) or is defective.</p> <p>Action / Remedy: If the pool pump is connected to the pool heat pump, make sure the electronic control that runs the pool pump and pool heat pump are programmed correctly.</p> <p>If the code is still displayed:</p> <ul style="list-style-type: none"> - Make sure the pool pump is switched ON; - Press ON/OFF to restart the pool heat pump; - On new installations, ensure the installation instructions were respected; - Check that the pool water level is correct, that the pool pump is filled with water to the rim and that water is flowing correctly through the pool pump to the pool heat pump; - Check swimming pool and pool pump skimmer baskets and the drain at the bottom of the pool for obstructions; - Check the filter cartridges for obstructions (wash or change the cartridges); - Carry out a backwash for sand filters and ensure they are working correctly; - Ensure that the bypass valves are in the correct positions so that the water flows adequately; - Ensure vacuum robot or other cleaners are disconnected so that the water flows freely; - Check that there are no leaks on the pool plumbing (there should be no air leaks in the pipe work); - If you have a two speeds pool pump, make sure it is set at the highest speed.

Service Analyser Codes

Code	Problem - Action / Remedy												
DEF	<p>Problem: Normal defrost cycle. The fan blades are turning, but the compressor has stopped. For Ultra and Reversible (XLR) model, the fan blades do not turn but the compressor runs.</p> <p>Action / Remedy: Normal during defrost cycle. Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and are not covered under warranty.</p> <p>If temperatures are below the minimum temperatures the pool heat pump should not be operated and must be switched off.</p> <p>For Ultra and Reversible (XLR) units, they will automatically stop without human intervention.</p> <table border="1" data-bbox="1352 659 2018 824"> <thead> <tr> <th>Model</th> <th>Atmospheric conditions must be above</th> <th>Pool water temperature must be above</th> </tr> </thead> <tbody> <tr> <td>Ultra</td> <td>32 °F (0 °C)</td> <td>50 °F (10 °C)</td> </tr> <tr> <td>Reversible (XLR)</td> <td>43 °F (6 °C)</td> <td>65 °F (18 °C)</td> </tr> <tr> <td>All others</td> <td>52 °F (11 °C)</td> <td>65 °F (18 °C)</td> </tr> </tbody> </table> <p>For Ultra or Reversible (XLR) Model: If the unit performs 4 consecutive cycles (heating and defrost) within 1 hour, the unit goes into protection mode and alternately displays the water temperature and the DEF code. The fan motor runs for 30 minutes to cool the evaporator and then stops. The compressor is always off. The unit restarts automatically when the outside temperature is 43 °F (6 °C) and more.</p> <p>If the code stays on permanently:</p> <ul style="list-style-type: none"> - Ensure the evaporator is clean. If not, switch the unit OFF from the circuit breaker (fuse) and use a garden hose to lightly clean the evaporator. Allow it to dry before re-starting the pool heat pump to avoid premature ice build up on the evaporator. - Ensure installation instructions have been followed. Improper installation, e.g. no air circulation, could lead to the pool heat pump continually going into defrost mode and the installation will need to be corrected by the owner. This situation is not covered by the warranty. 	Model	Atmospheric conditions must be above	Pool water temperature must be above	Ultra	32 °F (0 °C)	50 °F (10 °C)	Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)	All others	52 °F (11 °C)	65 °F (18 °C)
Model	Atmospheric conditions must be above	Pool water temperature must be above											
Ultra	32 °F (0 °C)	50 °F (10 °C)											
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)											
All others	52 °F (11 °C)	65 °F (18 °C)											

Service Analyser Codes

Code	Problem - Action / Remedy												
LP	<p>Problem: Low refrigerant level in the pool heat pump or the low-pressure safety control is defective.</p> <p>Atmospheric conditions as well as the pool water temperature should not be below the minimum operating temperatures, as stated below, in order to obtain efficiency and avoid codes from appearing on the electronic control temperature display. These codes are not generally a problem with the pool heat pump at these conditions and are not covered under warranty.</p> <p>If temperatures are below the minimum temperatures the pool heat pump should not be operated and must be switched off.</p> <table border="1"> <thead> <tr> <th>Model</th> <th>Atmospheric conditions must be above</th> <th>Pool water temperature must be above</th> </tr> </thead> <tbody> <tr> <td>Ultra</td> <td>32 °F (0 °C)</td> <td>50 °F (10 °C)</td> </tr> <tr> <td>Reversible (XLR)</td> <td>43 °F (6 °C)</td> <td>65 °F (18 °C)</td> </tr> <tr> <td>All others</td> <td>52 °F (11 °C)</td> <td>65 °F (18 °C)</td> </tr> </tbody> </table> <p>Action / Remedy:</p> <ul style="list-style-type: none"> - If the LP code is shown permanently, press ON/OFF before getting to the next step; - Ensure the evaporator is clean. If not, switch the unit OFF from the circuit breaker (fuse) and use a garden hose to lightly clean the evaporator. Allow it to dry before re-starting the pool heat pump to avoid premature ice build up on the evaporator. - Ensure installation instructions have been followed. Improper installation, e.g. no air circulation, could lead to the pool heat pump continually going into LP mode and the installation will need to be corrected by the owner. This situation is not covered by the warranty. 	Model	Atmospheric conditions must be above	Pool water temperature must be above	Ultra	32 °F (0 °C)	50 °F (10 °C)	Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)	All others	52 °F (11 °C)	65 °F (18 °C)
Model	Atmospheric conditions must be above	Pool water temperature must be above											
Ultra	32 °F (0 °C)	50 °F (10 °C)											
Reversible (XLR)	43 °F (6 °C)	65 °F (18 °C)											
All others	52 °F (11 °C)	65 °F (18 °C)											
HP	<p>Problem: Low water circulation in the unit or the high-pressure control is defective.</p> <p>Note: The pool pump will stop functioning only if the internal time delay of the pool heat pump is being used.</p> <p>IMPORTANT: When the code HP is permanently displayed, before performing the steps below please press ON/OFF for the electronic control with diagnostics and the reversible (XLR) electronic control with diagnostics.</p>												

Service Analyser Codes

Code	Problem – Action / Remedy
HP	<p>Action / Remedy: Make sure the water reaches the pool heat pump and the pool pump is completely filled to the rim. Otherwise:</p> <ul style="list-style-type: none"> - Fill the pool pump with water and check to see if the pipes between the pool pump and the pool are watertight (there should be no air intake); - Check the swimming pool and pool skimmer baskets and the drain at the bottom of the pool for obstructions; - Check the filter cartridges for obstructions (wash or change the cartridges, as the case may be); - Insure that the bypass valves are in the correct positions so that the water flows adequately; - Backwash sand filter (insure that there is a sufficient amount of sand and verify that it does not have to be changed. Consult a swimming pool specialist if necessary); - Make sure the vacuum robot is disconnected so the water flows freely; - If you have a two speeds pool pump, make sure that it is set at the highest speed.
OFF	<p>Problem: The electronic control with diagnostics or reversible (XLR) electronic control with diagnostics is OFF or could be defective.</p> <p>Action / Press on the ON/OFF key</p>
oC1, Sc1	<p>Problem: The water temperature probe has a loose connection or is faulty. The probe will need to be checked and replaced, if required.</p> <p>Action / Remedy: Contact customer service.</p>
ot	<p>Problem: Water temperature is higher than 45 °C (113 °F) within the unit (this code is only displayed on the electronic control with diagnostics and reversible (XLR) electronic control with diagnostics).</p> <p>Action / Remedy:</p> <ul style="list-style-type: none"> - Make sure the bypass valves are in the correct positions; - Proceed to the calibration of the electronic control with diagnostics and reversible (XLR) electronic control with diagnostics.

WARRANTY

IMPORTANT

Before you contact Waterco for assistance or service, please check the “**Troubleshooting**” and the information stated in this section. Warranty will only cover manufacturing defects. All service call requests which are not of this nature must be paid by the purchaser to the service company authorized by Waterco.

Warranty service is to be completed by an authorized Service Center authorized by Waterco. Where applicable, in home service will be made available only in areas where a contracted service provider offers service.

If in home service is not available, the product will be repaired or replaced at Waterco discretion by the nearest authorized service provider. The unit removal and reinstallation works are under the customer responsibility, and Waterco cannot be charged for them.

**** DO NOT return the unit to your dealer as they do not provide the service work. ****

When you contact Waterco for assistance or service, in order to qualify for a warranty claim, the original purchaser must have the model name and serial number along with a proof of the original purchase date. **Proof of purchase must be forwarded to Waterco and they will inform you of the applicable warranty.**

Once connected with a Waterco customer service agent, proceed to describe in detail the problem associated with your pool heat pump. If a permanent code appears on the electronic control panel, please advise the Waterco service agent.

Waterco guarantees to the **original purchaser** of the pool heat pump that the product is free from any manufacturing defect (raw materials and labour).

IMPORTANT: The warranty is not transferable and no action can be exercised by a consumer, subsequent purchaser, of the pool heat pump.

When buying the pool heat pump, Waterco guarantees parts and labour for a specific determined period to correct defects in materials or workmanship. Contact Waterco to find out the warranty that is applicable for your model.

There is no other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose. During warranty period, Waterco will, at its option, repair or replace, without charge, any product or part, which is found to be defective under normal use and service.

WARRANTY

Waterco does not guarantee and will not pay for:

1. Service calls to:
 - Inspect and/or correct the installation of your pool heat pump.
 - Instruct you on how to use your pool heat pump.
 - Replace house fuses or correct power supply problem.
 - Adjust or re-establish water flow to the pool heat pump.
2. When a service call with no manufacturing problem has been detected, on site, by the service company mandated by Waterco.
3. Damage to your pool heat pump caused by accident, misuse, fire, flood, storms, natural disasters, improper installation, harsh environment, chemical feeding before the pool heat pump, improper maintenance of water chemistry or any problem related with instructions described in the Use and Care Guide and not followed by the purchaser/end-user.
4. Damage to internal piping or components due to improper winterizing before freezing conditions.
5. Repairs to parts or system resulting from unauthorized modification made to the pool heat pump.
6. Repairs not previously authorized by Waterco.
7. Parts and pool heat pump transportation.
8. Fees charged for excessive time to repair your pool heat pump due to incorrect or un-accessible location. This may void warranty cover and the owner will be required to pay a service call fee even if the unit is not repaired.

Waterco's obligation to repair or replace at Waterco's option, shall be the original purchaser's sole and exclusive remedy under this warranty. Waterco shall not be liable for incidental, consequential or special damages arising out of or in connection with product use or performance.

Waterco is not responsible for direct or indirect damages resulting from defective components. This warranty gives you specific legal rights and you may also have other rights, which vary from state or province to another.